

# AMC16-DETT Manual

## **BRIEF INTRODUCTION**

Base station dedicated DC energy meter AMC16-DETT is specially designed for base stations where have sharing requirements, and switch power supply is without the function of sub-user metering. The meter could measure 6 circuits DC energy, and supply working current to the matched hall sensors. Meanwhile, it can realize zero drift calibration by upper computer software. have the functions of telemetering, teleindication, teleadjusting, metering at real time, energy quality abnormal alarm, data storage and processing, data interaction. This meter can measure DC power consumption of **three operators**, providing detail datas for base station.

### MODEL

NAME	MODEL	INSTALLATION
Base station DC energy meter	AMC16-DETT	35mm din rail


### **SPECIFICATIONS**

Technical parameter		Index	
input	DC rated voltage	1 channel: -48VDC	
	DC current	6 channels hall sensors: total 200A/5V, China Telecom, China Mobile, China Unicom and the 1 <sup>st</sup> channel reserve 50A/5V, 2 <sup>nd</sup> channel reserve 100A/5V.	
	Commercial power monitoring	1 channel: 0-5VDC	
	Overload capacity	Voltage:1.2times continued,2 times continued 1s; Current: 1.2 times continued,10 times continued 1s.	
Accuracy (superposition hall sensors)		1%ln≤l≤10%ln error $\pm$ 2.5%; l>10%ln error $\pm$ 2%	
Measurement resolution		Voltage output accuracy 0.01V; current output accuracy 0.01A; power output accuracy 0.01kw; energy output accuracy 0.01kwh	
functions	Basic function	Monitor device system time, total voltage, output total current, power, energy, each channel voltage, current, power, energy; LED indicator display;485 communication	
	Metering function	Start current: under rated voltage, when the load current value of the meter doesn't exceed 1% of the max. current, the meter starts.  Shunt running current: when there is no current in the current circuit of the meter, and 85%-125% of the rated voltage is applied on the voltage circuit, the calculator shall not have more than one digital change	
	Alarm function	DC voltage output low alarm,DC voltage output high alarm,one power down alarm, module voltage loss alarm, metering branch error alarm, internal program error alarm, clock error alarm, memory failure alarm, AC input power failure alarm	



_				
		Timing for still	support broadcast timing, could remote timing to the meter	
		Timing function	through RS485 communication.	
		Communication	Single channel RS485, baudrate 9600bps, can be set to 1200BPS,	
			2400bps, 4800bps.	
			Communication protocol: standard or custmized	
		Hall sensor power	Power supply output: 127/100Mp. 127/E0mA	
		supply	Power supply output:+12V/100Ma, -12V/50mA	
		Clock accuracy	≤0.5S/d(23°C), ≤1S/d(-20°C-60°C),	
Auxiliary po	wer	Voltage range	-40V~-60VDC	
supply		Power consumption	Whole device≤2W( no hall power supply output)	
Storage		· ·	It has the storage function of historical power data and historical	
		storage	alarm information, and the memory is 2MB	
Insulation resistance		on resistance	≥40MΩ	
environment		Temperature	Working : -20°C~+60°C; storage:-40°C~+70°C	
		Humidity	≤98% no condensation, no corrosive gas place	
		Altitude	≤4000m	
Protection level		ection level	IP20	
Material flame retardent		(I - v v - t - v - t - v - t	Terminal glow wire temperature 960 $^{\circ}\mathrm{C}\pm$ 10 $^{\circ}\mathrm{C}$ ,shell glow wire	
		name retardent	temperature 6500 $^{\circ}\mathrm{C}\pm$ 15 $^{\circ}\mathrm{C}$	
installation		stallation	Standard 35mm din rail	
		age input	Dealtrakes Flo	
		erential mode)	Peak value 5kA	
protection	Aux	liary power supply	Dealership Flo	
(0	(diff	erential mode)	Peak value 5kA	

# **DIMENSION**

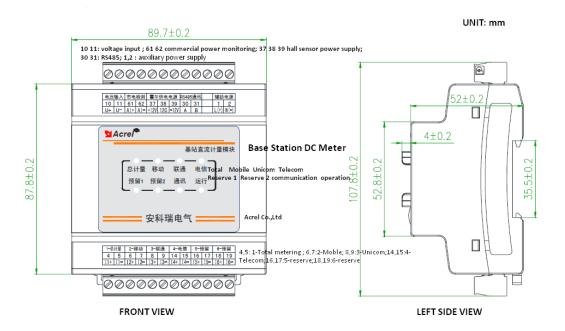




#### **INSTALLATION AND WIRINGS** VOLTAGE INPUT COMMERCIAL POWER AUXILIARY POWER -48V -48V FUSE 31 2 10 | 11 | 61 | 62 | 37 | 38 | 39 | 30 1 U+ U- AI+ AI- +12V 12G -12V L(+) N(-) 6 7 8 9 14 15 16 17 18 19 I1+ | I1- | I2+ | I2- | I3+ | I3- | I4+ | I4- | I5+ | I5- | I6+ | I6-HALL SENSOR HALL SENSOR HALL SENSOR HALL SENSOR

Note: arrow direction should be the same with current direction marked on the sensor .



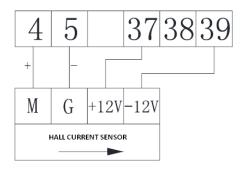

HALL SENSORS WITH ISOLATION FUNCTION WIRING

- 1. input voltage should not be higher than 120% of product's rated input voltage, must install 1A fuse at the voltage input terminal.
- 2. Current input should use external diverter or hall sensor.
- 3. To ensure the accuracy, the DC meter should used together with Acrel hall sensors, the wiring length between sensors to meters should <3m.
- 4. Advise use three core shielded wires as communication connection wires. Each core >0.5mm<sup>2</sup> connect A,B, Connect shielding layer to earth, and keep communication line away from strong electric cable or other strong electric field environment during wiring
- 5. The hall sensor opening locking screw must be tightened to ensure the closed-loop tightness of the sensor

### **RECOMMEND HALL SENSOR**

